

Model 340

200-shot BB Repeater with 13-Shot Speedload Clip



BB cal. (4.5 mm) Steel Airgun Shot ©

POWERLINE

WARNING: NOT A TOY. ADULT SUPERVISION REQUIRED. MISUSE OR CARELESS USE MAY CAUSE SERIOUS INJURY OR DEATH. MAY BE DANGEROUS UP TO 100 YARDS (92 METERS).

THIS IS A HIGH POWER AIRGUN RECOMMENDED FOR USE BY THOSE 16 YEARS OF AGE OR OLDER. READ ALL INSTRUCTIONS BEFORE USING. THE PURCHASER AND USER SHOULD CONFORM TO ALL LAWS GOVERNING USE AND OWNERSHIP OF AIRGUNS.

Daisy Outdoor Products, Rogers, AR 72757-0220 U.S.A., www.daisy.com 300570-000 REV. 12/12

WARNING: THIS GUN CAN CAUSE THE LOSS OF AN EYE OR OTHER SERIOUS INJURY. ALWAYS BE SURE THE SHOOTER, AND PEOPLE OBSERVING, WEAR SHOOTING GLASSES. READ AND FOLLOW THE INSTRUCTIONS CAREFULLY. DO NOT LOAD AMMUNITION INTO THE MAGAZINE UNTIL YOU ARE READY TO SHOOT. IF YOU DO LOAD AMMUNITION AND DECIDE NOT TO SHOOT, REMOVE IT EITHER MANUALLY OR BY SHOOTING IT AT A SAFE TARGET. AN UNCOCKED, UNLOADED GUN IS SAFEST. ACCIDENTS HAPPEN FAST, AND THE LOSS OF AN EYE OR OTHER SERIOUS INJURY IS A TERRIBLE THING. SHOOT SAFELY.

This safety alert symbol indicates important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

Although your new PowerLine® pistol is not a firearm, it is a gun and should be treated with the caution and respect due to any conventional firearm. Always remember, the first and most important safety feature of any gun is the shooter. All safeties are mechanical devices and the shooter is the only part of the system that can make a gun safe—or unsafe. DON'T DEPEND ON MECHANICAL SAFETIES—think ahead and avoid situations that might lead to accidents.

Guns differ in their operation, and you are never ready to fire any gun until you are thoroughly familiar with it. Read the following operating instructions and, WITHOUT LOADING ANY AMMUNITION, proceed through the operating steps, dry firing your gun several times at a safe target. This will enable you to learn to operate the Model 340 properly and safely.

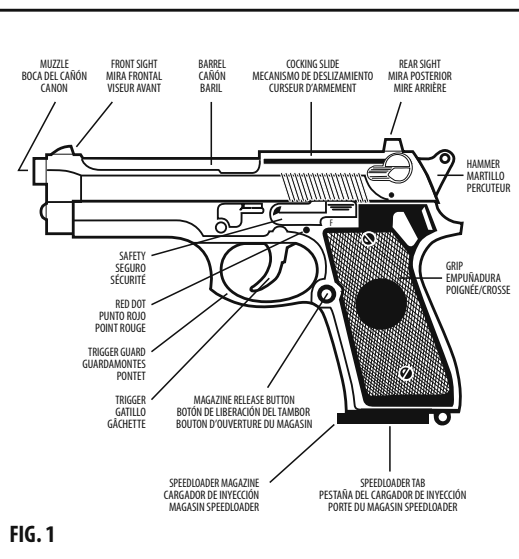 


FIG. 1

HOW TO OPERATE:

WARNING: Be sure gun is always pointed in a safe direction. Never point the gun at anyone. Always assume and treat the gun as if it were loaded and ready to fire.

STEP 1. PUT "ON SAFE" - NO RED DOT SHOWING

Push the safety down (Figure 3) until no red dot is showing. In this position the pistol cannot be fired by pulling the trigger.

NOTE: The safety is not automatic. It will only do its job when you do yours. REMEMBER, THE BEST SAFETY IS GOOD GUN HANDLING.

STEP 2. LOAD

Ammunition is loaded from the magazine into the firing position as the slide is returned to the forward position during cocking. **NOTE:** To help prevent misfeeding ammo do not hold the slide open while cocking.

FILL AMMUNITION MAGAZINE: (Fig. 2)

The removable SPEEDLOADER magazine is located in the grip of your pistol. It is removed by pressing the magazine release button located just behind the trigger guard (See Figure 1).

1. Fill the SPEEDLOADER magazine reservoir with a maximum of 200 BBs.
2. Insert the SPEEDLOADER magazine into the grip of your pistol.
3. Pull the SPEEDLOADER tab all the way out until it clicks and remains fully extended. Shake the pistol to reload the Clip without removing the SPEEDLOADER magazine.
4. Push the SPEEDLOADER tab back in until it locks in place.

AMMUNITION:

CAUTION: Use only Daisy quality .177 cal. BBs with your Model 340 pistol. Do not use lead pellets, soft air BBs, buckshot, ball bearings, paintballs or any other foreign object because they could damage or jam the pistol.

STEP 3. COCK (Fig. 4)

With the muzzle pointed in a safe direction, grasp the cocking slide as shown in Figure 4. Pull back firmly and release in one smooth motion to cock. **NOTE:** Grasp the slide firmly as you cock it to prevent it from slipping and snapping shut and possibly causing injury. Your pistol is now loaded and should be handled with care.

STEP 4. AIM AT A SAFE TARGET

To be a consistent marksman, use the correct sight picture each time you fire the pistol. (Figure 5)

STEP 5. TAKE "OFF SAFE"

Push the "safety" up until red dot is showing. (Figure 6)

WARNING: Use extreme caution in operating because the pistol is now ready to fire when the trigger is pulled.

STEP 6. FIRE

After completing the operation steps and aiming in a safe direction, your pistol may be fired by squeezing the trigger.

WARNING: If ammunition does not fire after completing the operation steps, do not assume that the gun is unloaded. Keep the gun pointed in a safe direction.

1. Put "ON SAFE".
2. Remove magazine so additional ammunition won't try to load.
3. Cock gun with muzzle pointed down.
4. Close slide.
5. Take "OFF SAFE".
6. Fire gun in a safe direction.

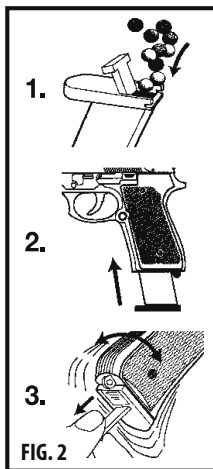 


FIG. 2



FIG. 3

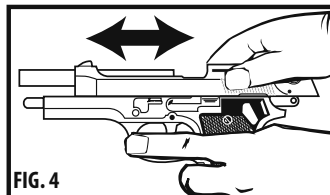 


FIG. 4

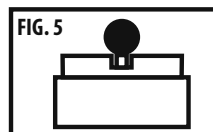 


FIG. 5

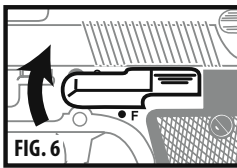 


FIG. 6

BB DOES NOT FIRE

WARNING: If a BB does not fire after completing the operation steps, do not assume that the gun is unloaded. Keep the gun pointed in a safe direction.

CHECK THE FOLLOWING IF A BB DOES NOT FIRE

1. Did the Magazine or Clip contain Daisy® or similar quality BBs? If not, refill the Magazine with BBs and repeat the operation steps.
2. Was the safety in the "F" FIRE position - RED DOT SHOWING when the trigger was pulled? If not, repeat the operation steps.
3. If the pistol still does not fire, refer to warning below.

WARNING: If the pistol still fails to shoot a projectile after checking the three items noted, there is a malfunction in the pistol. This could represent a dangerous condition. There could be a BB in the pistol even though a BB did not shoot out. This could cause the user to mistakenly believe the pistol is unloaded. At no time should you look down the barrel of the gun. Put safety in the "S" SAFE position - NO RED DOT SHOWING, and send the pistol directly to DAISY MANUFACTURING SERVICE DEPARTMENT. Refer to section on REPAIRS OF DAISY GUNS.

HOW TO UNLOAD

After a shooting session is complete, the gun should be unloaded before storing it. To unload the gun always position the safety in the "S" SAFE position - NO RED DOT SHOWING, remove the SPEEDLOAD magazine and empty the BB reservoir. Remove all ammunition from the 13-shot SPEEDLOAD clip.

CAUTION: Even though you have gone through an unloading procedure, continue to treat the gun as though it were loaded. Don't point at anything you don't intend to shoot. Always put safety in the "S" SAFE position - NO RED DOT SHOWING until you are ready to fire.

STORAGE

Store your pistol unloaded. Put "ON" safe and remove all ammunition from the pistol's speedload clip and reservoir. Keep pistol away from children and untrained shooters. Store ammunition separately from the pistol to keep them from untrained shooters.

PROPER CARE

With care and periodic cleaning, your pistol will provide many years of shooting enjoyment. As is the case with conventional firearms, abuse, neglect, and continued exposure to the elements will impair the performance of any airgun. Learn to take care of your pistol and it will serve you well.

CAUTION: Never attempt to clean the pistol until it is "ON" SAFE, and the ammunition has been removed from the gun.

EXTERIOR PARTS

Any plastic parts may be cleaned with a damp rag and mild soap or detergent. Avoid using strong detergent, abrasive cleaning compounds or solvents that may scratch or otherwise damage surfaces. The exposed metal parts should occasionally be wiped clean using a soft cloth that is lightly oiled with clean motor oil.

LUBRICATION

Your pistol was lubricated when built and should not require any additional lubrication.

MODIFICATION

CAUTION: The components of this gun were engineered to deliver optimum performance. Any modification or tampering with a gun may cause a malfunction and may make it unsafe to use. Any change in performance (such as a lowered trigger pull force and shortened trigger travel), indicates possible modification, tampering and/or wear. Such a gun should be inspected, replaced or properly repaired by qualified personnel. Any gun that has been dropped should be checked by qualified personnel to ensure that its function has not been affected.

REPAIR OF POWERLINE® AIR PISTOLS

WARNING: A PISTOL THAT IS NOT OPERATING PROPERLY MAY BE DANGEROUS. IT SHOULD BE KEPT SAFELY FROM USE BY ANYONE UNTIL REPAIRED OR DESTROYED. DO NOT TRY TO TAKE THE GUN APART. IT IS DIFFICULT TO REASSEMBLE, AND IMPROPER REASSEMBLY CAN CAUSE A HAZARDOUS CONDITION.

GUNS IN WARRANTY

LIMITED ONE-YEAR WARRANTY

For one year from date of purchase, Daisy will repair or replace and return this gun, free of charge, if defective in material or workmanship. Service is available by returning the gun to Daisy Outdoor Products (refer to important note that follows). Attach to the gun, your name, street address, and telephone number, description of problem and proof of date of retail purchase (sales slip). Package and send transportation prepaid to Daisy Outdoor Products. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

IMPORTANT: You can return your inoperative pistol to Daisy Outdoor Products for repair via United Parcel Service (UPS). Be sure to put "ON safe and unload all ammunition from the reservoir and clip before returning the pistol to Daisy. You must include your street address for Daisy to send your pistol directly back to you through UPS delivery.

GUNS OUT OF WARRANTY

If your PowerLine® air pistol needs repair, please call 1-800-713-2479 for repair charges. Daisy will repair the gun or replace it with a reconditioned gun of the same model, if available; otherwise, with a model of equivalent quality.

Daisy Outdoor Products, Service Department, 308 West Stribling Drive, Rogers, AR 72756 U.S.A.

MODEL 340 PISTOL SPECIFICATIONS

ACTION	Spring Air powered
CALIBER	.177 cal. (4.5mm) BB
AMMO CAPACITY	200-shot BB Magazine with 13-shot Speedload Clip
MAX. SHOOTING DISTANCE*	100 yds. (92 m)
MUZZLE VELOCITY	240 fps (74 mps)
BARREL	Smooth bore steel
SAFETY	Crossbolt trigger block
SIGHTS	Blade and ramp front; fixed open rear
WEIGHT	1 lb. (.46 kg) empty
OVERALL LENGTH	8.5 in. (21.59 cm)

*With muzzle pointed upward at optimum angle

LEARN TO SHOOT SAFELY

Daisy Outdoor Products has a rich heritage of teaching young and first time shooters to shoot safely. In order to effectively implement shooting education programs nationwide, Daisy has partnered with the following organizations which teach shooting safety and provide additional shooting safety materials and information. We encourage you to contact Daisy at 1-800-643-3458 or one of these organizations to sign up for a shooting safety class in your area.

PROGRAM MATERIALS & EQUIPMENT (U.S. customers only)

Daisy Outdoor Products
800-713-2479
www.daisy.com

PROGRAM INFORMATION

American Legion Junior Shooting Sports Program
317-630-1249
www.legion.org

NRA Youth Programs
800-672-3888 ext. 1505
www.nrahq.org/youth

4-H Shooting Sports
Contact your County Extension Agent
www.4-h.org

Junior Olympic Shooting Program
719-866-4670
www.usashooting.com

